



---

Radio Connection Pin Out: FoxView3 LCD APRS Viewer

## FoxView3 (REV: FV3-1010)

### J2: D9F: Connects to Radio & DC +8 to 12V

1. Audio out from FoxView3 to transceiver (MIC)
2. NC
3. PTT to transceiver
4. NC
5. Transceiver receiver audio input to FoxView3 (RX Input)
6. Power & Signal Ground
7. +8 to 12V for FV3 & GPS (Parallel to J3)
8. NC
9. NC

### J1: D9M:

1. Connects to PC by a Null Modem Serial cable.
  2. Connect to GPS Directly
- 
1. NC
  2. Serial IN
  3. Serial Out
  4. +5V for GPS (1A)
  5. Ground.
  6. to 9, not used.

Dinesh Gajjar / 28<sup>th</sup> Sept 2010

Please visit <http://www.foxdelta.com> for more information on this project.