



# Fox Delta

Amateur Radio Projects & Kits

FD- GCPU - 0613

## GCPU DIP SWITCH Configuration Details for PM4, SWM4, AAZ, FC4

**DIP SWITCH Down = ON,  
DIP SWITCH UP=OFF**

### SWM4: Dual Channel SWR Meter

DIP	SWM4	COMMENTS
1	OFF	Bridge type selection
2	OFF	Bridge type selection
3	ON	Bridge type selection
4	ON	OFF = enable CH1 counter
5	ON	
6	ON	
7	ON	OFF = Std Alone
8	ON	

### PM4: 500MHZ Dual Channel RF Meter

DIP	PM4	COMMENTS
1	ON	
2	ON	
3	ON	
4	ON	
5	ON	
6	ON	
7	ON	OFF = Std Alone (future usage)
8	ON	OFF = Test mode

## FC4 Frequency Counter and RF Meter

DIP	FC4	COMMENTS
1	ON	
2	ON	
3	ON	
4	ON	
5	ON	
6	ON	
7	ON	
8	ON	OFF = Loop test mode

## AAZ-0912, AA0914A & AAZ-0713/A Antenna Analyzers

DIP	AAZ	COMMENTS
1	ON	
2	ON	
3	ON	
4	ON	
5	ON	
6	ON	
7	ON	
8	ON	OFF = Loop test mode

### Note:

"Pushing BTN1 at power on activates the bootloader in PIC4550 for F/W update"

For more info and latest updates, please visit: <http://www.foxdelta.com>

---