



EEPROM SETUP GUIDE: PIC16F876A ST2 USB / RS232 PC Interface

Before using ST2, it is required be configured so that ST2 knows what is connected to!

At power ON, following LCD message indicates FW version:



Next message will be as follows:



“Bad eeprom” message indicates that ST2 is **not yet configured** and that ST2’s Eeprom need to be written with **connected device information**.
(Such as a Yaesu Rotor Controller)

If you are using anything other then Yaesu rotors, connect 8 Wire cable according to your requirement.

TR1 Connections at ST2: (Goes to Yaesu Rotor Controller / DIN8) Connections count from “TR1”

1. GROUND
2. +VE (_12V from ROTOR)
3. AZ (Analog Feedback From Rotor)
4. EL (Analog Feedback From Rotor)
5. LEFT
6. RIGHT
7. DOWN
8. UP

To write ST2's Eeprom, do as follow:


1. Connect 8 Wire cable from ST2 Screw Terminal to DIN8 Plug that connects to G5500/5400.
2. When ST2 is connected to Controller, Power ON ST2.
3. Keep pressed one of the front button until you see following menu on LCD



Now, with rotor connected and G5400/5500 powered ON, follow LCD Setup menu and enter rotor data by way of moving rotor.

SETUP Uses following Keys: U = UP, D = Down, R = Right and L = Left.

Front Panel Keyboard look like this:

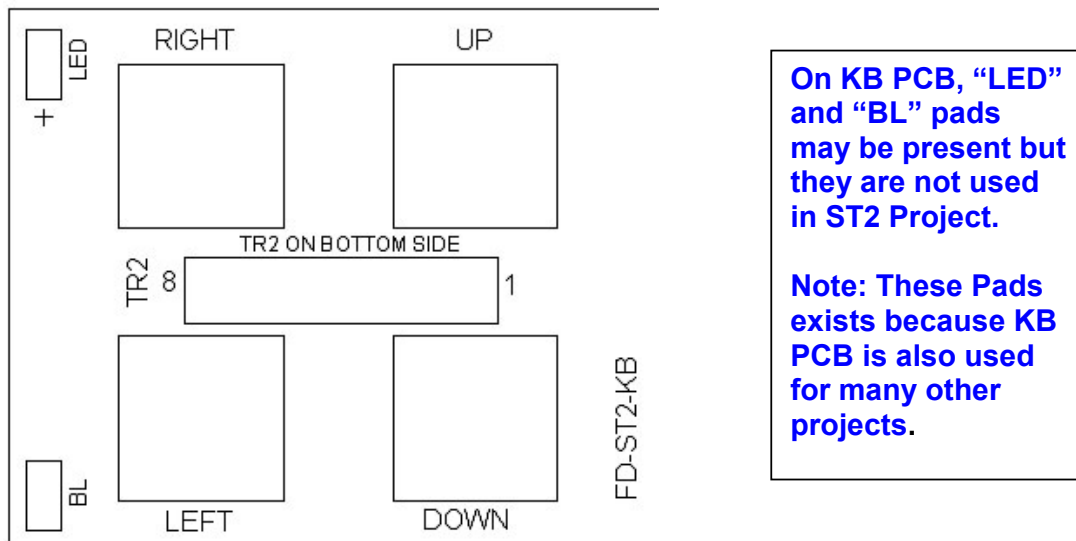

At the end of EEPROM configuration, SAVE and EXIT.

At next start up (Power ON) you will not see "Bad Eeprom" message.

Dinesh Gajjar / 15th Feb 2020

Please visit Project Page: <http://www.vu2fd.com> or <http://www.foxdelta.com/>